

# Pevco Link™

Touch Control with Content Tracking



010001 101 0001 001

010001 101 0001 001 000000101

010001 101 000

010001 101 0001 001 000



010001 101 0001 001

With convenient delivery tracking, simple to use functions, built-in directories and easy to read display, Pevco Link™ is the optimal way to send and track items through a pneumatic tube system. Pevco makes sending pharmaceuticals, lab specimens and blood products fast, safe and simple.

Send and receive blood products, lab specimens and pharmaceuticals easily and quickly



## STANDARD SEND

Simply select the carrier destination using a shortcut button, directory menu or keypad. No authorization or barcodes required. Standard Sends, like all transactions sent with Pevco Link, are documented in a SQL database and viewable at the station or through the Pevco Link Web App.



## TRACKED SEND

Know exactly what items were sent, when it left, when it arrived and even who received patient-critical items with barcode tracking. Real-time and historical transaction data is easily accessed from the touch control and more detailed, downloadable records are available through Pevco Atlas™, the accompanying web application. With a real-time audit trail, Pevco Link's Tracked Send protects important materials by documenting their movement through a PTS from start to finish. Optional employee identification enables staff accountability.




Using a touch control that is as familiar as a smart phone and just as easy to use, you will spend less time sending, receiving and searching, and more time focused on patients.

## Combine Pevco Link™ with Pevco View™ to access a real-time web-application dashboard that documents every transaction

- The real-time web application provides read-only access to the pneumatic system transaction database. Every transaction sent with Pevco Link, regardless of the send type, is documented in the database. With the secure web application, pneumatic tube system users and managers have access to real-time detailed information about every transaction – whether the items were scanned or not.
- See when every transaction was requested, when it left its origin station and what time it arrived at its destination.
- For transactions sent in Tracked Send mode, see the exact contents delivered and the carriers used to transport them.
- Know which staff member sent and which received the delivery when employee barcodes are scanned.
- All data is sortable, searchable and can be downloaded to a spreadsheet for further analysis.

Have the confidence that deliveries get to the right department at the right time. With Pevco Link, deliveries are documented in real-time and arrive when and where they are needed.

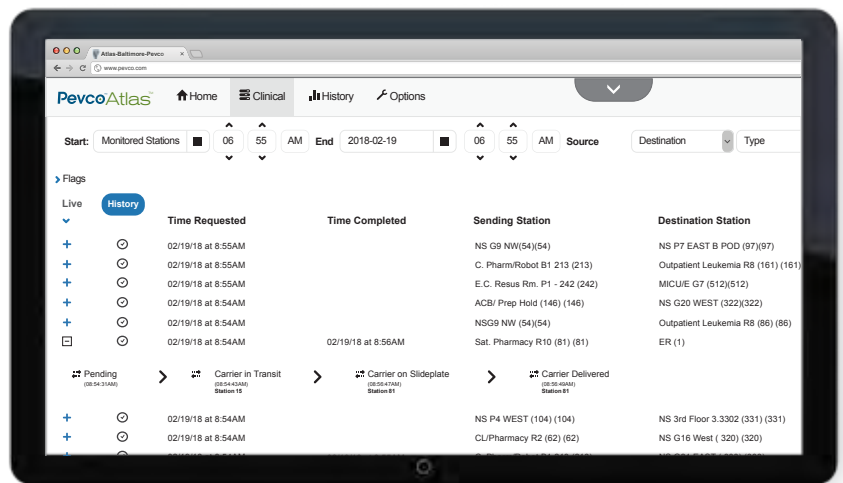

The screenshot shows the PevcoAtlas desktop application interface. It features a navigation bar with Home, Clinical, History, and Options tabs. Below the navigation, there are filters for Monitored Stations and Type. A table displays transaction history with columns for Time Requested, Time Completed, Sending Station, Destination Station, Status, and Duration. The table lists various transactions, including those in progress and completed, with a duration column that uses color coding (green for less than 1 minute, orange for 3 minutes, and grey for 1 minute).

Time Requested	Time Completed	Sending Station	Destination Station	Status	Duration
02/19/18 at 8:55AM		E.C. Resus. Rm. P1-242 (242)	MICU/E G7 (512) (512)	In Progress	Less than 1 minute
02/19/18 at 8:54AM		ACB/Prep Hold (146) (146)	NS G20 WEST (322) (322)	In Progress	Less than 1 minute
02/19/18 at 8:54AM		NS G9 NW (54) (54)	Outpatient Leukemia R8 (86) (86)	In Progress	Less than 1 minute
02/19/18 at 8:54AM		Sat. Pharmacy R10 (81) (81)	ER (41)	In Progress	3 minutes
02/19/18 at 8:54AM		NS P4 WEST (104) (104)	NS 3rd Floor 3.3302 (331) (331)	In Progress	Less than 1 minute
02/19/18 at 8:54AM		CL Pharmacy R2 (62) (62)	NS G16 West (320) (320)	In Progress	Less than 1 minute
02/19/18 at 8:53AM	02/19/18 at 8:54AM	C. Pharm/Robot B1 213 (213)	NS G21 EAST (303) (303)	Complete	1 minute
02/19/18 at 8:52AM	02/19/18 at 8:53AM	ACB/PACU/Overnight (116) (116)	Lab ( 913)	Complete	1 minute
02/19/18 at 8:51AM	02/19/18 at 8:52AM	NS P3 WEST A POD (101) (101)	NS P4 EAST B POD (914) (914)	Complete	1 minute
02/19/18 at 8:50AM	02/19/18 at 8:51AM	Sat. Pharmacy G14 (75) (75)	ER (41)	Complete	1 minute
02/19/18 at 8:49AM	02/19/18 at 8:50AM	E.C. Pod C P2 (245) (245)	NS G22 East (304) (304)	Complete	1 minute
02/19/18 at 8:48AM	02/19/18 at 8:49AM	NS Pg EAST B POD (99) (99)	Lab (913)	Complete	1 minute
02/19/18 at 8:47AM	02/19/18 at 8:46AM	NS G22 West (324) (324)	NS P7 EAST B POD (97) (97)	Complete	1 minute
02/19/18 at 8:46AM	02/19/18 at 8:47AM	ACB Pharmacy 14 (145) (145)	Pat/Sup B1 (60) (60)	Complete	1 minute
02/19/18 at 8:46AM	02/19/18 at 8:47AM	C. Pharm/ Robot B1 912 (912)	NS G10 SW (23) (23)	Complete	1 minute
02/19/18 at 8:45AM	02/19/18 at 8:46AM	Sat. Pharmacy G14	ER (41)	Complete	1 minute
02/19/18 at 8:45AM	02/19/18 at 8:46AM	ER (4)	Lab (913)	Complete	1 minute

Misplaced pharmaceuticals and lab specimens cost hospitals thousands of dollars. Reduce this loss with Pevco Link's content tracking capability.

## How Pevco Link works for you



### DOCUMENT CARRIER ARRIVAL

Any delivery can be documented upon arrival at its destination with the document carrier arrival feature. Staff scan the arriving carrier along with its contents to create an auditable record of important transactions.



### SEAMLESS INTEGRATION OF DELIVERY DATA WITH CLINICAL SYSTEMS

Pevco Link can integrate with other hospital systems so busy healthcare professionals can monitor and track tube deliveries with the same systems they use to manage pharmacy, lab and nursing operations. Pevco systems give time back to your clinical staff by giving them only one place to have to look for the information they need.



### STREAMLINED MAINTENANCE AND SUPPORT


Pevco Link supports the team that supports the Hospital. Resolving issues, finding items and troubleshooting the system is now easier than ever. With the Maintenance display on Pevco Link, authorized users perform a variety of actions to diagnose, adjust or modify the system—creating an efficient use of time and resources.





## Why Pevco Link is the right system for your hospital

- Limit human error with an intuitive touch control built for speed and accuracy
- Reduce delivery loss and keep staff focused on their patients with the integrated barcode reader for tracking and documentation of high value items
- Improve processes with detailed transaction reports that shed light on bottlenecks and delays
- Monitor deliveries, find missing items and analyze data with the user-friendly web application for real-time review of all transactions
- Access every station with a built-in A to Z Directory that provides a complete list of station addresses that is easy to use and update
- Save time with Twelve Shortcut Keys – customizable for each station – making the transactions to the most frequent destinations simple

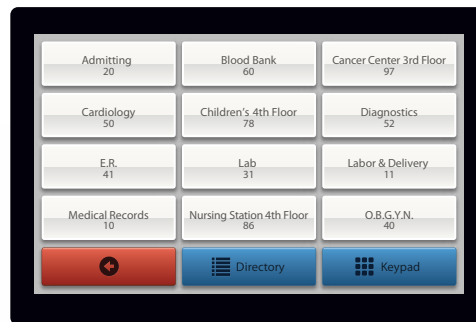

**Pevco Link is the only system that tracks the exact items sent and not just the carrier—reducing waste and speeding care.**



The Linked Hospital...

01

Reduce errors with an easy to read display

02

Send items that range from standard to sensitive with confidence

03

Get real-time detailed information about every transaction

**Pevco™**

1401 Tangier Drive, Baltimore, Maryland 21220  
Tel: 410.931.8800 800.296.7382 Fax: 410.931.4660

[www.pevco.com](http://www.pevco.com)