




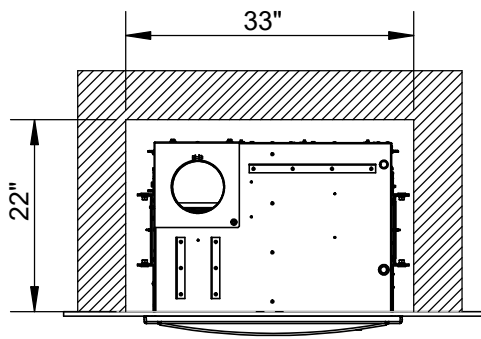


ROUGH OPENING REQ.

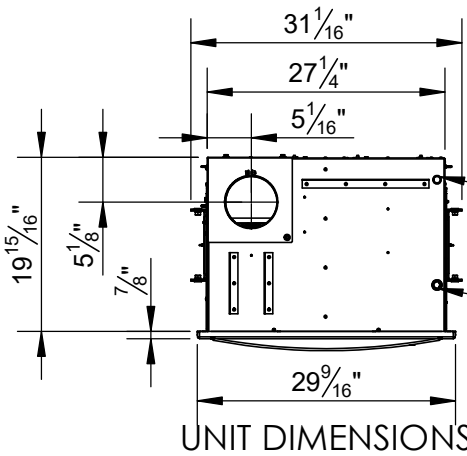


UNIT DIMENSIONS

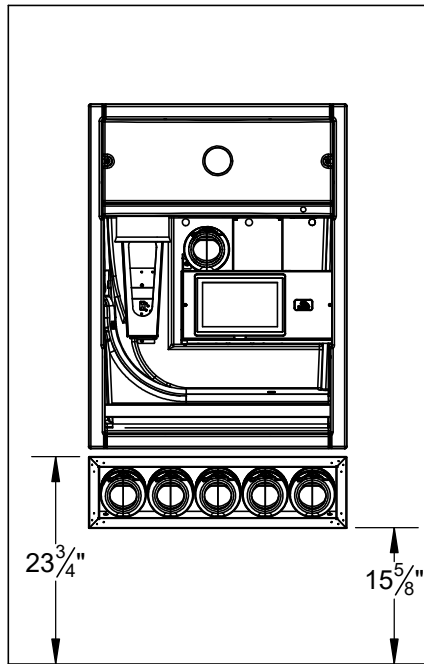

DRYWALL FRONT VIEW

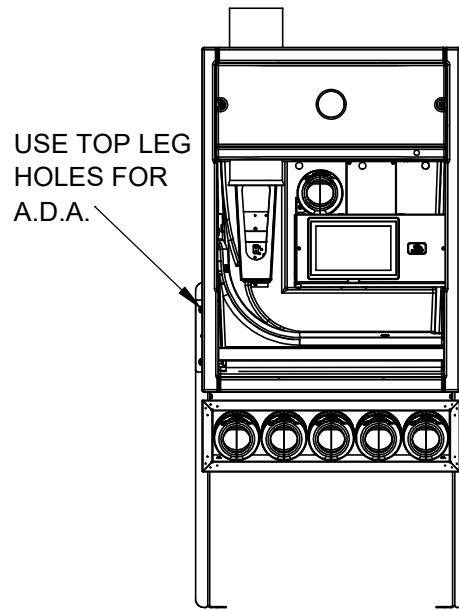

FRONT VIEW

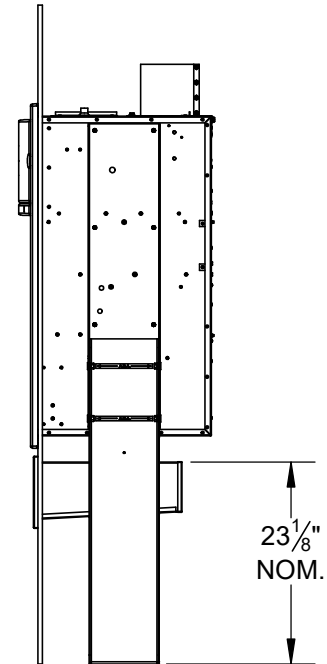

DRYWALL SIDE VIEW

1. STATION REQUIRES (1) 120 VOLT, 5 AMP CIRCUIT TO THE SERVICE DISCONNECT FACTORY WIRED INSIDE UNIT (SERVICE SUPPLIED & WIRED BY OTHERS)
2. STATION REQUIRES (1) ETHERNET CONNECTION TO THE FACTORY WIRED ETHERNET JACK, INSIDE UNIT (SERVICE SUPPLIED & WIRED BY OTHERS).
3. TO MEET A.D.A HEIGHT COMPLIANCE FOR CARRIER STORAGE LOCATION, THE TOP OF THE TOUCH SCREEN CONTROL PANEL MUST BE LOCATED AT A HEIGHT OF 45.0" (USE TOP LEG HOLES AS SHOWN)
4. ROUGH OPENING IS 33" WIDE X "22 DEEP X CEILING HEIGHT. DO NOT ENCLOSE OR DRYWALL UNTIL THE STATION, BEND, AND TUBING TO STATION IS INSTALLED. PEVCO WILL REMOVE THE SHIPPING COVER AND INSTALL THE TRIM FRAME WHEN PAINTING AND SURROUNDED FINISHES ARE COMPLETE.
5. CARRIER DISPATCH MOVES FROM REAR TO FRONT.
6. STATION WEIGHT IS 250 LBS

SCALE: NONE	6IN BEAM STATION, WITH SINGLE CARRIER STORAGE	CS CODE: 14 92 00	DRAWN BY: BLC	DATE: 07/14/26
SYSTEM SIZE: 6"			PCN: 26067	DATE: 07/14/26
ASSEMBLY #: 8S16011H			DWG #: C90109AB	REVISION #: 2