


Pevco™

Station Security Door

Pevco's pneumatic tube station **security doors** offer added protection for high-value pharmaceuticals and blood products.

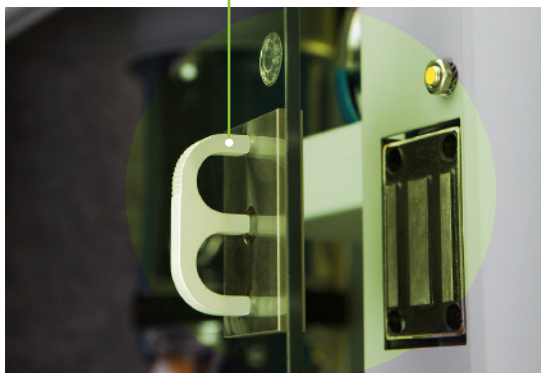

Security doors are ideal for:

- Securing high-value medication and materials
- Ensuring patient privacy at vulnerable public area stations
- Protecting against unauthorized station use

With a Pevco security door in place, hospital staff must enter an authorization code to release the durable electromagnetic lock to access the station's contents. Once unlocked, the door stays open, leaving hands free to remove the carrier that has arrived. If the door is not manually closed within 60 seconds, a programmable alarm rings as a reminder to close the door.

Made of the same durable, powder-coated steel as Pevco's stations, the security door is built to withstand the most demanding environment. The clear, shatter-proof polycarbonate window is secure yet allows users to easily see when a carrier has arrived.

Learn more about Pevco's security doors and other reliable products at www.pevco.com or call **1.800.296.7382**