



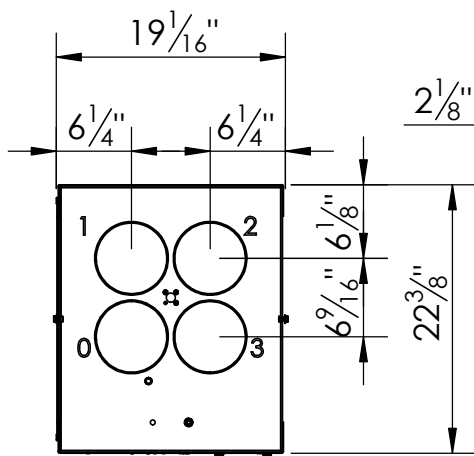


**MULTIPORT
SIDE**

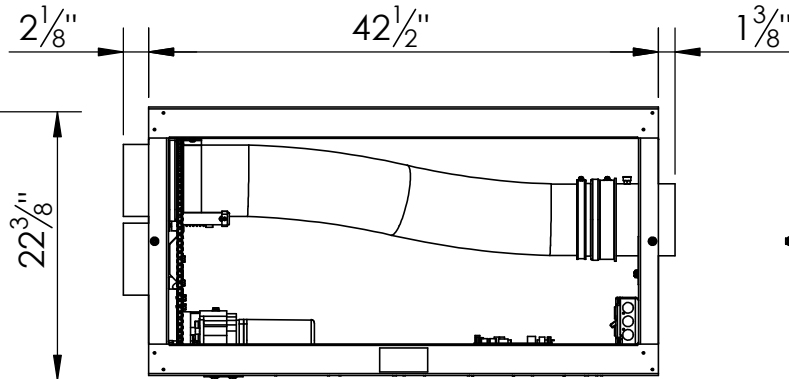

SIDE VIEW

ETHERNET CONNECTION TO AN ACTIVE JACK (INSIDE UNIT) ON THE SAME I.T. NETWORK AS THE P.T.S. CONTROL CENTER (BY OTHERS).


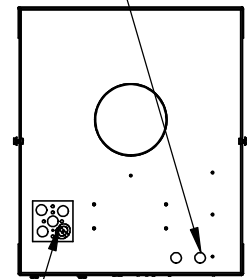


**SINGLE
PORT SIDE**


ELECTRICAL CONNECTION (BY OTHERS)
SERVICE DISCONNECT FACTORY WIRED (INSIDE UNIT)

NOTES;

1. MINIMUM OF 24" CLEARANCE ON ONE SIDE OF THE DIVERTER (FROM TOP OF THE DIVERTER TO THE FLOOR) IS REQUIRED FOR MAINTENANCE AND SERVICE ACCESS.
2. TWO 7/8" DIA. HOLES FOR COMMUNICATION CABLES (PROVIDED BY OTHERS) ON SINGLE PORT SIDE. POWER INLET ON SINGLE PORT SIDE.
3. DIVERTER REQUIRES 120V, 5 AMP DEDICATED CIRCUIT (PROVIDED BY OTHERS).
4. DIVERTER WEIGHT IS 155LBS.

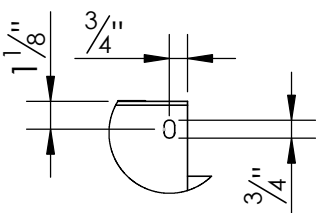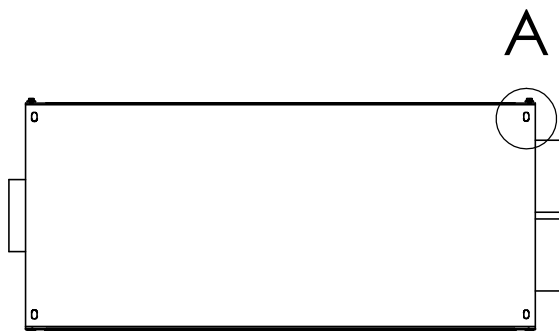

**DETAIL A
HANGER ROD LOTS
4PL TYP**

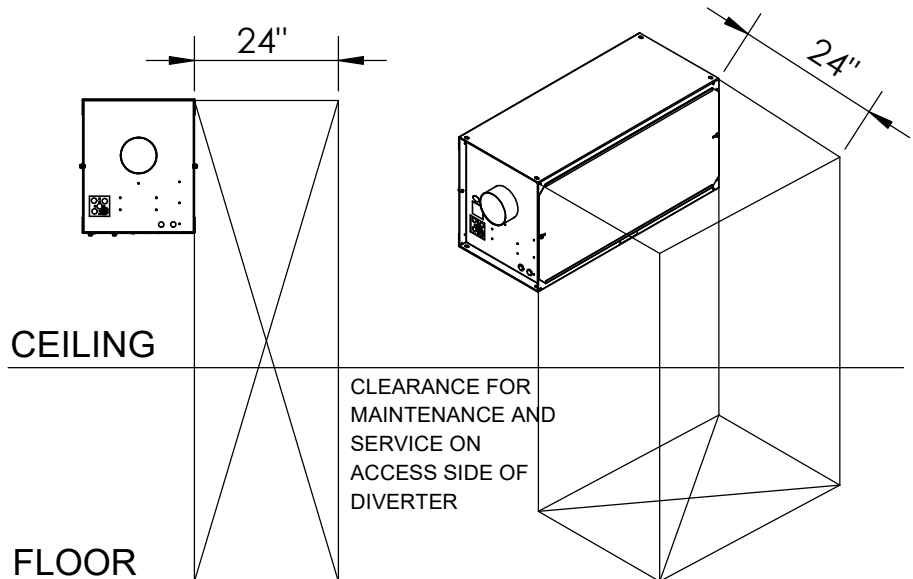

CEILING

FLOOR

CLEARANCE FOR
MAINTENANCE AND
SERVICE ON
ACCESS SIDE OF
DIVERTER

SCALE: NONE	6IN 4 PORT DIVERTER	DRAWN BY: NCS	DATE: 4/10/26
SYSTEM SIZE: 6"		PCN: 26036	DATE: 04/10/26
ASSEMBLY #: BD46010A		DWG #: C90102AA	REVISION #: 2
NICS CODE: 14 92 00			

