


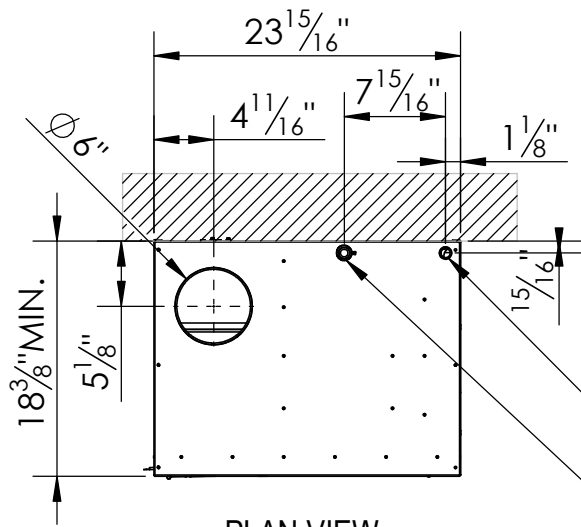


PLAN VIEW

NOTES:


1. STATIONS REQUIRES 120 VOLTS, 5 AMP DEDICATED CIRCUIT (PROVIDED BY OTHERS).
2. ONE (7/8") DIA. HOLE ON TOP OF STATION FOR COMMUNICATION CABLES AND ONE (7/8") CONDUIT FOR ELETTRICAL CONNECTION.
3. STATION IS FLOOR MOUNTED.
4. CONTROL PANEL IS HEIGHT IS APPROXIMATELY 56" TO CENTER. STATION IS NOT SUBJECT TO ADA REQUIREMENTS SINCE IT IS NOT USED BY THE PUBLIC.
5. ROUGH OPENING IS 20"X29"X63"
6. STATION WEIGHT IS 227 LBS.

ETHERNET CONNECTION TO AN ACTIVE JACK (INSIDE UNIT) ON THE SAME IT NECTWORK AS THE PTS CONTROL CENTER (BY OTHERS)

ELECTRICAL CONNECTION (BY OTHERS)
SERVICE DISCONNECT FACTORY WIRED(INSIDE NUT)

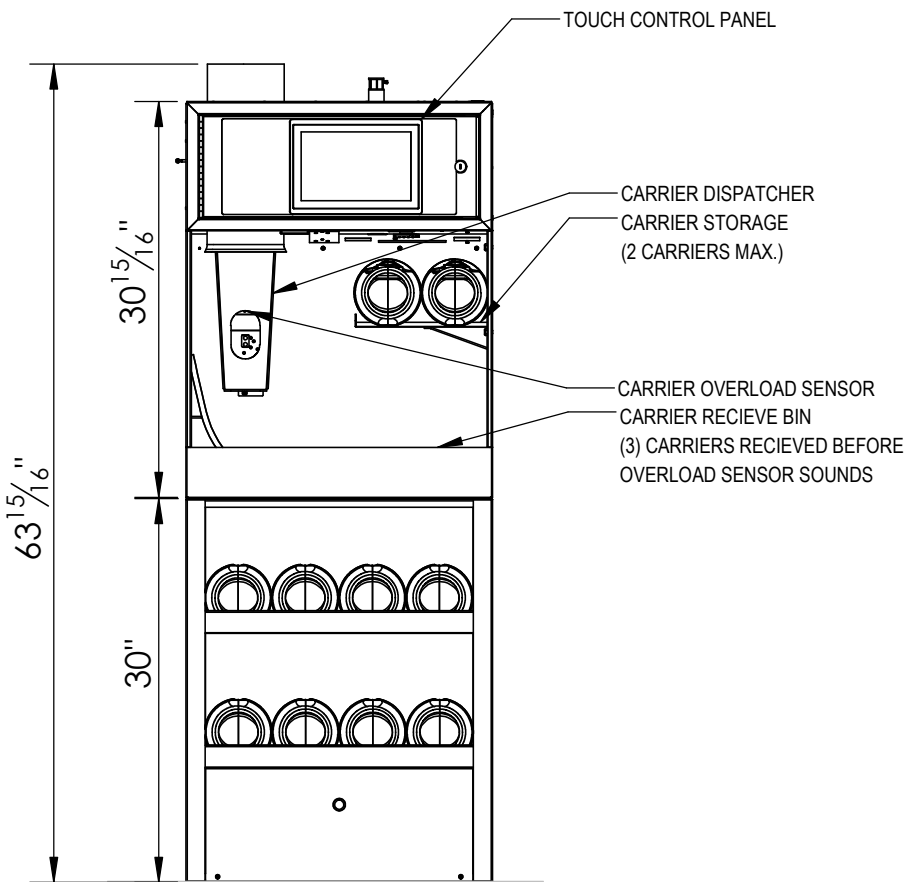

FRONT VIEW

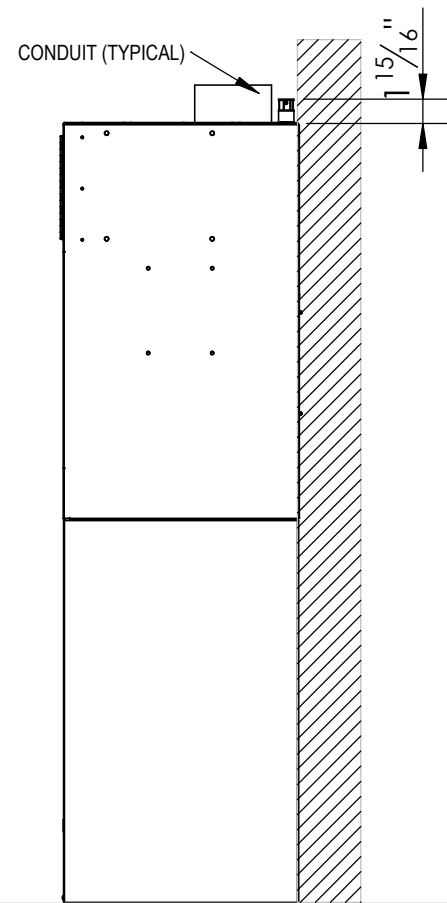

SIDE VIEW

SCALE: NONE	6IN COMPACT STATION WITH PEDESTAL	DRAWN BY: BLC	DATE: 06/03/26
SYSTEM SIZE: 6"		PCN: 25001	DATE: 06/04/26
ASSEMBLY #: 8S16020D		DWG #: C90107AA	REVISION #: 1

CSI CODE: 14 92 00

