


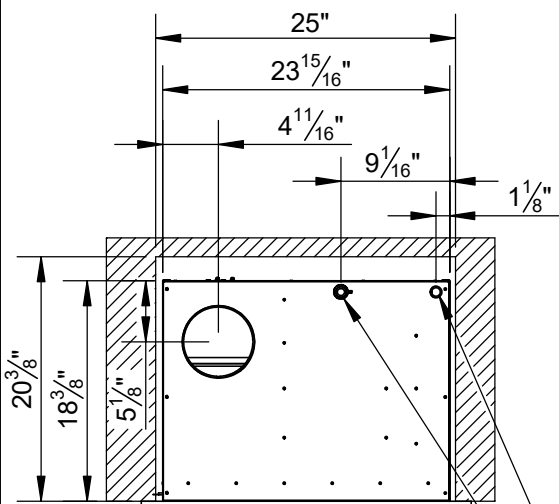


PLAN VIEW


NOTES:

1. STATION REQUIRES 120 VOLT, 5 AMP DEDICATED CIRCUIT (PROVIDED BY OTHERS).
2. ONE (7/8") DIA. HOLE ON TOP OF STATION FOR COMMUNICATION CABLES AND ONE (7/8") CONDUIT FOR ELETRICAL CONNECTION.
3. STATION IS FLOOR MOUNTED.
4. CONTROL PANEL HIGHT IS APPROXIMATELY 56" TO CENTER. STATION IS NOT SUBJECT TO ADA REQUIREMENTS SINCE IT IS NOT USED BY THE PUBLIC.
5. ROUGH OPENING IS 20" X 29" X 60 3/4". DO NOT ENCLOSE OR DRYWALL UNTIL STATION, TUBING, ETHERNET AND ELETRICAL CONNECTION ARE COMPLETED.
6. STATION WEIGHT IS 227.

ETHERNET CONNECTION TO AN ACTIVE JACK (INSIDE UNIT) ON THE SAME IT NETWORK AS THE PTS CONTROL CENTER (BY OTHERS)
ELETRICAL CONNECTION (BY OTHERS)
SERVICE DISCONNECT FACTORY WIRED (INSIDE UNIT)

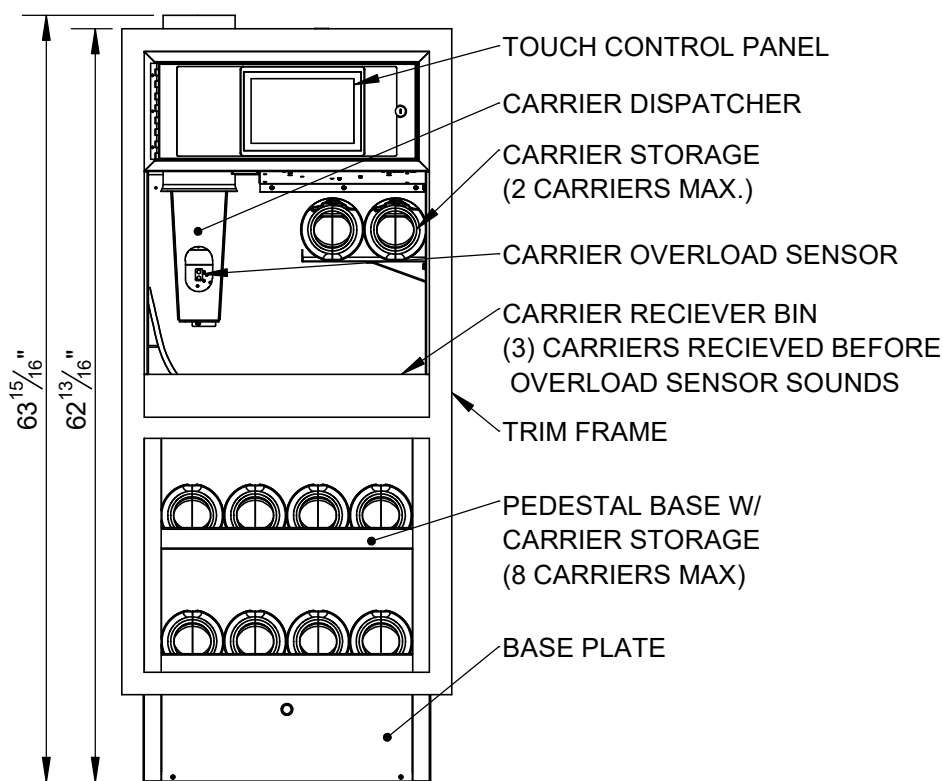

FRONT VIEW

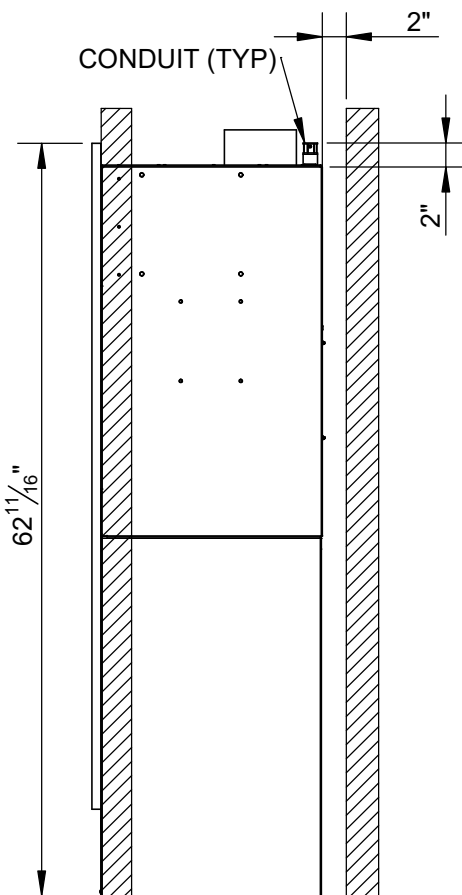

SIDE VIEW

SCALE:
NONE
SYSTEM SIZE:
6"
ASSEMBLY #:
8S16020G

6IN COMPACT STATION, WITH STORAGE SHELF,
WALL RECESSED

CSI CODE: 14 92 00

DRAWN BY:
BLC
PCN:
26072
DWG #:
C90112AA

DATE:
07/23/26
DATE:
07/23/26
REVISION #:
5